


## STUDIO MODERNE™ STONE

Claremont

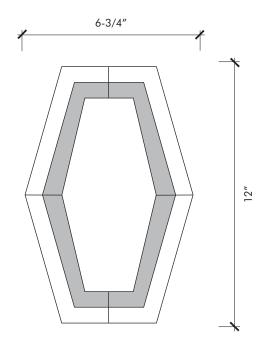

Usage		Blue Celeste	Café Bruno	Steel Grey
	Commercial Exterior Floor		<b>✓</b>	<b>✓</b>
	Commercial Interior Floor	✓	<b>✓</b>	<b>✓</b>
	Commercial Exterior Wall		<b>✓</b>	<b>✓</b>
	Commercial Interior Wall	<b>✓</b>	<b>✓</b>	<b>✓</b>
	Residential Exterior Floor		<b>✓</b>	<b>✓</b>
	Residential Interior Floor	<b>✓</b>	<b>✓</b>	<b>✓</b>
	Residential Exterior Wall		<b>✓</b>	<b>✓</b>
	Residential Interior Wall	<b>✓</b>	<b>✓</b>	<b>✓</b>
	Shower Wall	✓	✓	<b>/</b>

Material	Stone	
Finish	Honed	
Thickness	3/8"	
Cut and Fill Size	12" x 6-3/4"	
Square Feet/Piece	0.5651	
Mounting	Mesh	
<b>Available Colors</b> Blue Celeste Café Bruno Steel Grey		

Material Data		
MEDIUM	V3 Color Variation	
Sealing		
	Sealing is required prior to grouting	
	Grout with white thinset (Blue Celeste and Café Bruno only)	
Cleaning and Maintenence		
Ex.	Protect from harsh abrasive cleaners and tools	
Notes:		

- We recommend sealing all natural stone products with a penetrating sealer and sealing all porous non-polished stone (limestone, tumbled marble, etc.) prior to grouting. This prevents grout from staining or affecting the color of the stone. Stone is a natural product, and care should be taken to protect it from horsh abrasive cleaners and abrasive cleaning tools.
- If used for shower floors, must include waterproof membrane on substrate and 12 inches up adjacent walls prior to installation.
- White thin-set or mortar is required: light limestones, tumbled stones, "antiquated stones", and light-colored marbles.
- Likely identified with dry seam, pits, fossils, and glass veins that are often filled at the factory. The fill may perhaps leak through the voids. In this case, refilling these voids may be a necessary maintenance procedure.

