


Shimmer Surf Mosaic Installation

WALKER
ZANGER™

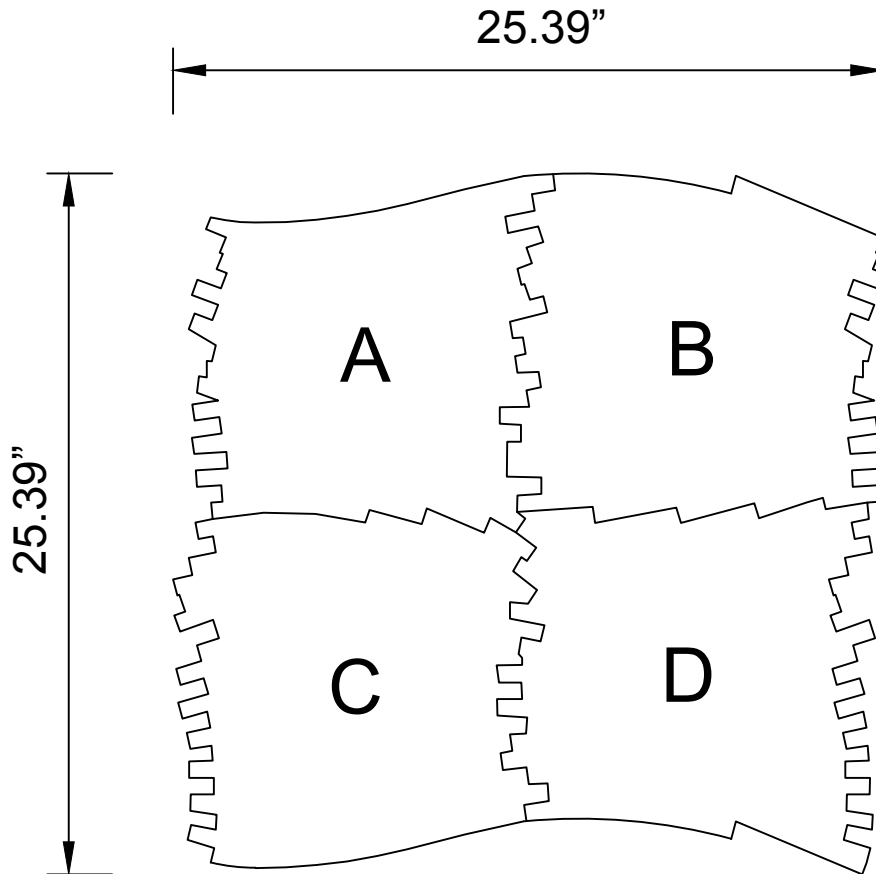

INSTALLATION INSTRUCTIONS

This mosaic requires four sheets to complete the pattern. Each sheet is labeled with an A, B, C, or D. The sheets must be assembled according to the diagram above in order to complete the pattern for the mosaic.

STEP 1

Prior to installation, please inspect the material by laying out the pattern according to the diagram above to ensure each piece interlocks properly.

STEP 2

Install the pattern one sheets at a time according to the diagram above.

STEP 3

Follow steps 1 and 2 for the next 4 sheets to be installed.

NOTE: It is important to follow the sheets with the letter and the arrow pointing upwards to avoid an incomplete pattern or pattern that does not interlock properly.



Caution! These are hand-cut glass tiles and may have sharp edges, please handle with care.